



1. Loading Labels

Open the base plate (D) of the labeller by using your thumb and middle finger and pull the two red plastic grips (E) in the direction of the handle (C) (Fig.1.1) Then open the top of the labeller by pulling upwards the two-ridged areas on either side of the label cover (B) (Fig.1.2.) Take a roll of labels and unravel it about 20cm. Hold the labeller so that the print setting knob (H) is facing you. Ensure the label cover (B) is fully open. Insert the unraveled length of the labels into the labeller until they drop freely out of the bottom (Fig 1.3) Place the remainder of the roll into the labeller then close the top cover until it clicks and then close the base plate.

Instructions for Punch models only: (Fig1.5)

- Remove and re-use the red label roll holder inserting a new Prix roll of Labels
- Insert the red label roll holder with the roll of labels onto the internal slits.

Hold the labeller upside down, take the end of the strip of labels and feed it into the labeller directly above the three arrows in the base plate, (Fig 1.4.) The labels should rest over the plastic bar. Insert about 2 labels straight down into this slot, hold them in this position, repeatedly squeeze the handles of the labeller together, until the labels catch and the printed labels start dispensing. If nothing happens try feeding the labels in further and squeeze the handles again.

2. Setting the print

Each of the print bands are adjustable. Pull the print setting knob (H) to the right, until the arrows in the red bar point to the character you want to set. (Fig.2.1) Turn the knob forwards or backwards until the character you want to print appears in the window. Once you have arranged the characters you wish to print, push in the print setting knob fully back to the left.

3. Labelling

Squeeze the handles of the labeller completely together and release them. The printed labels appear at the front of the labeller by the rubber pressure roller. The label is applied by placing the labeller at an angle of 30° and pulling it towards you, (Fig.3.1) while applying soft pressure against the product you are labelling.

4. Replacing the ink roller

Hold the labeller in your left hand. Open the red ink roller cover, (G) (Fig.4.1.) Remove the ink roller, (F) (Fig. 4.2.) Replace it with a new Prix ink roller and then close the cover.

5. Detecting faults

No print on the labels

- Has the setting knob been pushed firmly back to the left position?
- Does the ink roller require changing?

Labels not feeding

- Are the labels loaded incorrectly?
- Is the base plate closed and engaged?
- Are the correct size Prix labels loaded in your labeller?

Illegible or distorted print

- Is the print band damaged or incorrectly aligned?

Labeller appears stuck and handle will not move

- Check if the backing paper is exiting from the end of the base plate correctly

Labels are printing half on & half off the label or over printing on pre-printed labels

- Check that the labels are being fed into the labeller directly above the three arrows so they go over the black plastic bar
- The base plate is supplied with a guide adjustment print which can be lifted up from the original position "O" and can be moved up or down to alter the position of the print on the label.

Discharge of labels too quickly or too hard

- If labels are exiting too quickly there is a yellow break "+/-" on the right hand side of the labeller. Use a flat screwdriver to tighten (+, clockwise) or loosen (-, counter-clockwise) the roll.

Maintenance & Cleaning

If required, clean the labeller with a soft brush or cotton swab. Remove traces of adhesive build-up, bits of label and excess ink regularly.

ATTENTION: DO NOT USE ANY CLEANING AGENT OR SOLVENTS