

ASSEMBLY INSTRUCTIONS



Fig. 1



Fig. 2

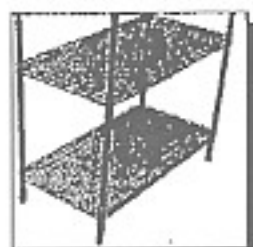


Fig. 3



Fig. 4



Fig. 5

CAUTION

INSPECT CONTENTS IMMEDIATELY AND FILE CLAIM WITH DELIVERING CARRIER FOR ANY DAMAGE. SAVE YOUR BOX AND ALL PACKING MATERIALS. YOU ARE RESPONSIBLE FOR DAMAGE TO YOUR UNIT IF RETURNED IMPROPERLY PACKED.

Before assembly please read.

Helpful Suggestions: Shelves up to 48" (1220mm) in length can support an evenly distributed static load of 800 lbs. (360 kg). Shelves of 54" (1370mm), 60" (1520mm), and 72" (1830mm) can support 600 lbs. (270 kg). Shelving units should not exceed 2400 lbs (810 kg) per set of four posts.

For best performance:

- units over 50" (1270mm) high be assembled with no less than 3 shelves, preferably 4 or more, and the bottom shelf be placed as low as possible or practical.
- on mobile units with shelves that are 18" (460mm) wide, the overall height should not be greater than 74" (1880 mm).
- on mobile units with shelves 24" (610mm) wide, the overall height should not be greater than 84" (2130mm).

Starter Unit

① Mount First Shelf

- ▶ Referencing numbers on posts, snap plastic tapered split sleeves onto each post at desired location of bottom shelf. The thicker part of the taper goes toward the bottom (Fig. 1). Make sure rib on split sleeve is seated into a groove on the post.
- note:** The number covered by the split sleeve indicates approximate height of shelf.
- ▶ Holding the first shelf on its side, insert the posts through the corner collars until split sleeves are seated snugly within collars (Fig. 2).
 - ▶ Stand the unit upright.

② Mount Additional Shelves

- ▶ Snap split sleeves onto post at the location for the second shelf.
- ▶ Lower shelf onto the post until the split sleeves are snugly seated within corner collars (Fig. 3).
- ▶ Repeat for each additional shelf working from the bottom to the top.

③ Securely Seat All Shelves

by placing a board across the corners and tapping with a hammer (Fig. 4). **caution:** Do not hammer directly on wire or corner. **helpful hint:** Large installations are easier if all posts are marked first. Lay posts on floor with leveling bolts against a wall or straight edge. Mark all posts using a magic marker or grease pencil (Fig. 5).

④ Move the Unit to the desired location and level. The leveling bolts allow approximately 1/2 inch adjustment.

WARNING

SLIPPING HAZARD

- Push mobile units in long direction.
- Use caution when moving heavily loaded carts - heavy loads are hard to control.
- Do not step, stand or climb on shelving units.
- Place heavy objects on lowest shelf.
- Inspect casters before use.
- Replace casters that are worn immediately.

Failure to follow these guidelines can result in property damage or personal injury.